

***IMPORTANT,RETAIN FOR FUTURE REFERENCE*
PLEASE READ CAREFULLY**



Boori International

AUSTRALIA
18-20 Charles Street
St.Marys Sydney NSW
2760 Australia
Ph: 612 9833 3769 Fax: 612 9673 4240

Boori UK Limited

UNITED KINGDOM
Wells house.Unit.5
Woolley Barns,Woolley
Wantage,OX12 8TA UK
Ph: 44 14 8863 9500 Fax: 44 14 8863 9505


Changing Tray kit Hardware and parts list

Suitable for BOORI COUNTRY for your chest with MADISON PELMET,NEWPORT PELMET,ROSEDALE PELMET.

1 x Allen Key	4 x Wood dowels	2 x 45mm Connecting bolts		
A	B	C		
			1 x Left piece	1 x Right piece
	Actual size	Actual size	1 x Front piece	

Assembling the change tray


Stage 1:

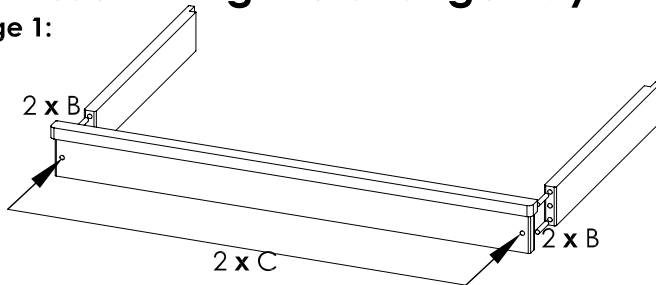

Attach left piece and right piece to front piece with 2 x C bolts and 4 x B wood dowels.


Stage 2:

Remove 2 bolts in pelmet side.

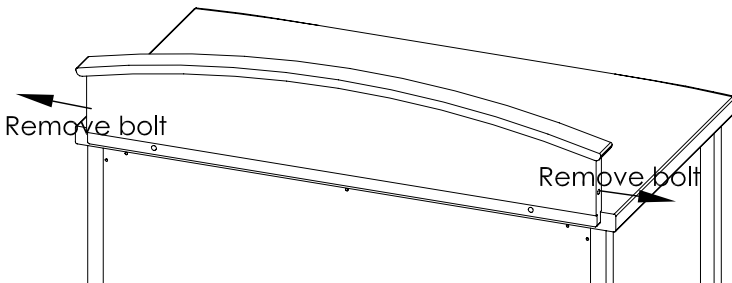

Stage 3:

Then attach the change tray to the pelmet with the 2 bolts removed from the pelmet.

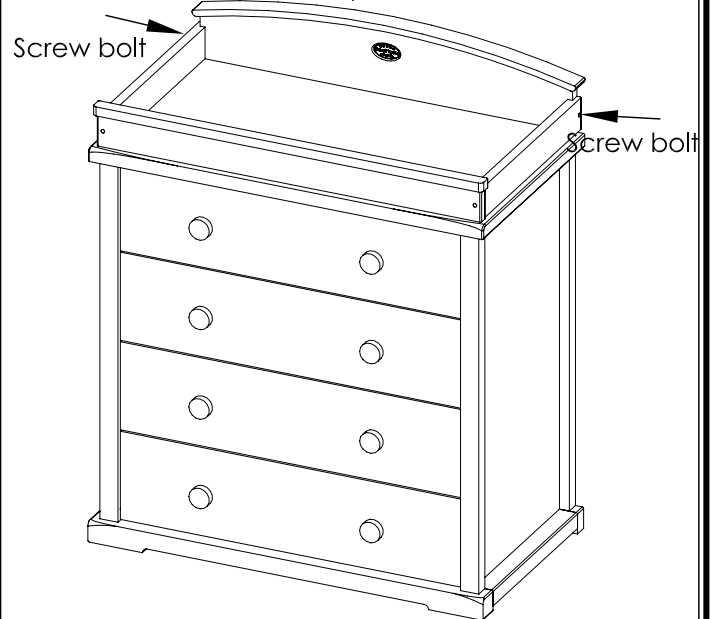

CHANGING TRAY can be matched with MADISON PELMET or NEWPORT PELMET or ROSEDALE PELMET .

Maintenance of your Boori Country Furniture

- * TO ENSURE THE SAFETY OF YOUR COT, BED OR CHANGE TABLE, REGULARLY CHECK ALL THE CONNECTING BOLTS AND GLIDE PINS MAKING SURE THEY ARE TIGHT, CARE SHOULD BE TAKEN THAT NO SCREWS ARE LOOSE
- * GLIDE PINS AND BOLTS SHOULD BE TIGHTENED EVERY FOUR TO SIX MONTHS TO ENSURE COT/FURNITURE REMAINS STABLE
- * TO CLEAN YOUR COT & FURNITURE USE A SOFT CLOTH DAMPENED WITH WATER
- * DO NOT USE STRONG HOUSEHOLD CLEANERS
- * AVOID CONTACT WITH SHARP OBJECTS
- * WHEN MOVING YOUR COT,BED OR FURNITURE DO NOT DRAG, ALWAYS LIFT AND PLACE IN POSITION